

Hidden brake system



Roller Mosquito Screen

saxun
by Giménez Ganga

Step 1

Insert the brake into the rail of the mosquito screen.

Warning: Left and right brake

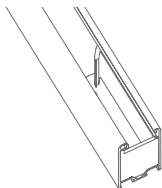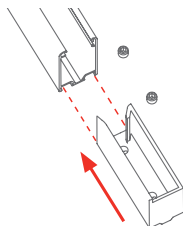

Step 2


Make the base of the brake flush with the end of the guide.

(If the sill is not uneven).

Step 3

Fix in the correct position with the DIN 914 M5x6 mm screws.

(Flush the screws with the brake).

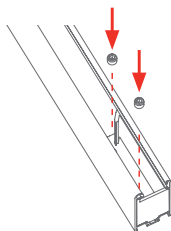

Attention

Insert the brake by aligning its outer perimeter with the inner perimeter of the guide.